

6 MAINTENANCE

- 6.1 Routine : Routine instrument maintenance is limited to keeping the instrument clean.
- 6.2 Overhaul : The instrument may be removed from the case by removing three 10-32 screws on the instrument panel. The chassis where the connectors are mounted is attached to the case by four 10-32 screws. A detailed description of the operation of each module assembly is presented in parts 5 to aid trouble-shooting.